

BARBER CHAIR

MAXIM

MODEL9500



OPERATING INSTRUCTIONS

▲ IMPORTANT

Intended Use of the Product


This product is intended for the exclusive use in hair salon for the treatment and service, and must be operated or handled by the qualified/professional hairdressers or by their staffs under the supervision of hairdressers.

Such hairdressers or staffs should instruct and/or assist the salon customers to approach to and leave from the product.

Salon customers should not be allowed to operate or handle the product unless he or she is so instructed.

**TAKARA
BELMONT**

1. OVERALL VIEW & MAJOR COMPONENTS

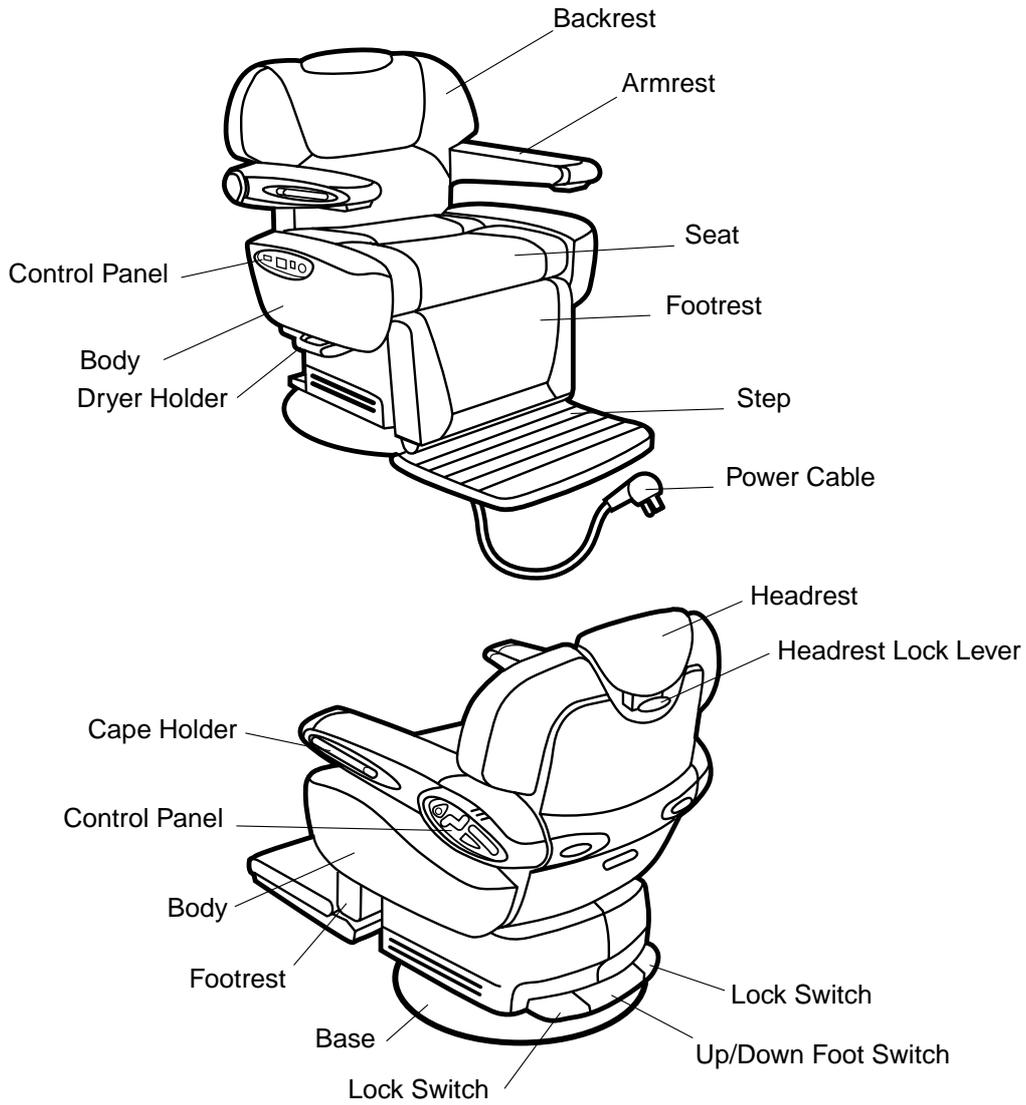


2. OPERATING INSTRUCTIONS

(1) Main Power Switch

A circuit breaker of 7 Amp. is built in the main power switch.
Turn ON the main power switch.


⚠ CAUTION

 Operate the main power switch only by hand. Keep the main power switch OFF when the chair is not used for long term.




(2) Control Panel

Control panels are provided on both sides of the chair under the armrest.

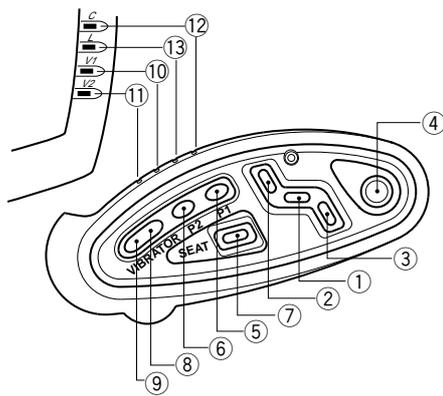

Right Side

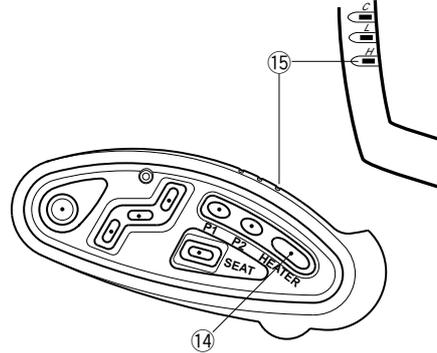

Left Side

Manual Switches

① Up/Down switch

Keep depressing the switch upward (or downward) until the chair seat reaches at the desired height.

② Backrest switch

Keep depressing the switch forward (or backward) until the backrest reaches at the desired angle.

③ Footrest switch

Keep depressing the switch forward (or backward) until the footrest reaches at the desired angle.

⑦ Seat Up/Down switch

Keep depressing the switch upward (or downward) until the chair seat reaches at the desired height.

Automatic Switches

④ Auto-return switch

Momentarily depress the switch, the chair will be brought to the initial position.

⑤⑥ Preset switches

Momentarily depress the P1 switch (or P2 switch), the chair seat and backrest will be brought to the preset seat height and backrest angle.

Vibrator Switches (Option)

⑧ Upper/⑨ Lower part vibrator switch and ⑩ Upper/⑪ Lower part vibrator indicator

Momentarily depress the switch once, the vibrator will be work to the wave pattern mode and indicator will be blinked.

The vibrator will be stopped after five minutes automatically.

Momentarily depress the switch twice, the vibrator will be work to the flat pattern mode and indicator will be lit.

The vibrator will be stopped after five minutes automatically.

Momentarily depress the switch three times, the vibrator will be stopped.

⑫ **Center position indicator** / ⑬ **Lock indicator**

Momentarily depress the lock switch, and rotate the chair to the front position by hand. When chair is the front position correctly, center position indicator will be lit and chair rotation will be locked automatically then lock indicator will be lit.

⑭ **Heater switch** / ⑮ **Indicator for Heater**

Momentarily depress the heater switch, the heater will be work and indicator will be lit.


Safety stop

An automatic procedure (P1, P2 or Auto-return) can be stopped immediately by depressing any chair control switch.

(3) **Foot Switches**

Lock switch

The chair can be rotated freely by momentarily depressing the lock switch, and can be locked at any position by momentarily depressing the lock switch again. Keep the chair rotation “locked” to prevent unexpected rotation.

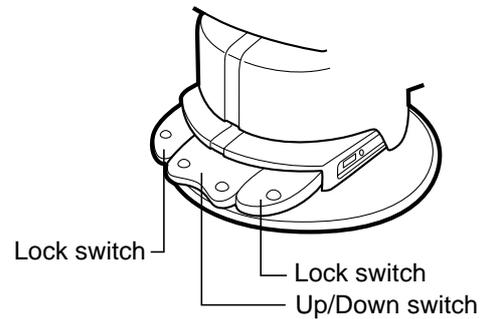

Up/Down switch

The chair seat height can be adjusted by foot switch. Keep depressing right side part or left side part of Up/Down switch to raise or lower the chair seat until it reaches at the desired height.

⚠ CAUTION

Keep the chair rotation “LOCKED” always except when the chair is rotated. This is to prevent the chair from unexpected rotation.

(4) **Headrest Adjustment**

Lift up the handle for headrest to the required position and rotate the headrest forward until lock. When storing the headrest cushion, keep pressing lock button and rotate the headrest backward then lower the headrest.



(5) Cape holder

Push up the front part of cape holder and rotate the cape holder forward.

Pull the tip of the cape holder forward over the cape.

Catch the cape by pinching the cape by the tip of cape holder.

When storing the cape holder, rotate it backward and push in the front part of cape holder to armrest.




(6) Iron control panel

1. Turn ON the iron switch, then indicator lamp (marked COMPUTER) will be lit.

2. Connect the iron to 2-hole outlet, indicator lamp will be lit.

3. The temperature increases by rotating the temperature control knob clockwise and decreases by rotating counter-clockwise.

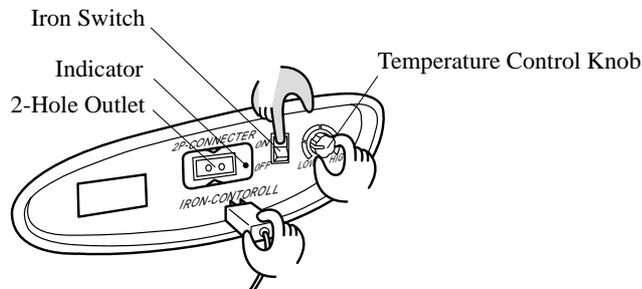

3. ADJUSTMENT OF PRESET POSITION

Two preset chair position can be memorised.

(a) Set the chair seat, backrest and footrest to the required position, with manual switches.

(b) Keep the P1 Switch (or P2 switch) being depressed until the electronic sound is heard.

(c) Then release the P1 Switch (or P2 switch).

Now, a new preset position is memorized.

4. OVERHEAT PROTECTOR

The hydraulic motor pump is equipped with a overheat protector which protect the motor from being damaged by overheating by excessive operation or by malfunction of switch.

Do not run the motor continuously.

Protector will be reset in about 10 minutes.

5. CARE AND MAINTENANCE

No maintenance is required except normal care and cleaning.

Clean vinyl upholstery, surfaces of metal and plastic components with mild soap and water.

Keep all the surfaces dry after cleaning.



Takara Belmont Corporation

1-1,2-Chome, Higashi-Shinsaibashi,
Chuo-ku, Osaka, Japan

DECLARATION OF CONFORMITY

CE CONFORMITY

We hereby declare that the product listed below complies with the essential requirements of the EMC (electromagnetic compatibility) Directive, 89/336/EEC, 91/263/EEC, 92/31/EEC, 93/68/EEC and the Low Voltage Directive, 73/23/EEC, 93/68/EEC.

Applicable European standards for the product which is conformed to the Directives, are EN50081-1:1992, EN50082-1:1992 and EN60335-1:1994.

The product has been placed on the market in EU with CE Marking for Low Voltage Directive since 1997.

BARBER CHAIR

MAXIM

Representative in EU:

Takara Belmont (U.K.) Ltd.

Belmont House

One St. Andrews Way, Bow,

London E3 3PA U.K.

Tel : (44)20 7 515 0333

Fax : (44)20 7987 3596

Signature

K. YOSHIKAWA
MANAGING DIRECTOR
PRODUCTION DIV.

Date: 28th September, 2000



TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : (06) 6213-5945

FAX : (06) 6212-3680