


This leaflet contains important instructions you need to understand, although it is separate from the Operation Manual. Keep this leaflet safe with the Operation Manual.

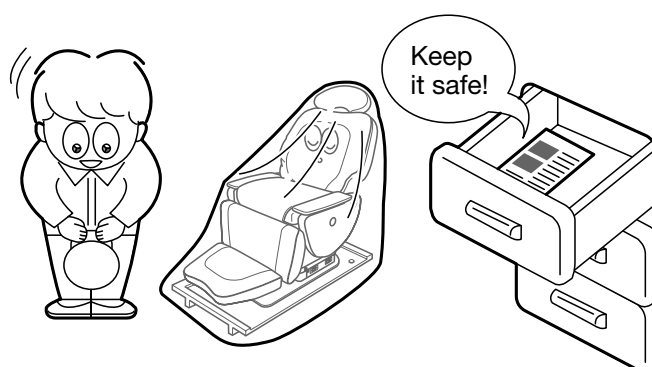



Installing the chair

The chair weighs 130 kg.

- CAUTION** ● To relocate the chair within the salon or to another salon, follow the steps below and be careful to avoid injury.

1 Carry the chair to the installation location.


- Hold the pallet to carry the chair.
(Do not hold only the upper part of the chair. The base may come off, causing injury.)
- Before removing the pallet from the chair, secure a specified carrying jig to the base.
(If you don't have any carrying jig, contact your nearest dealer or Takara Belmont.)

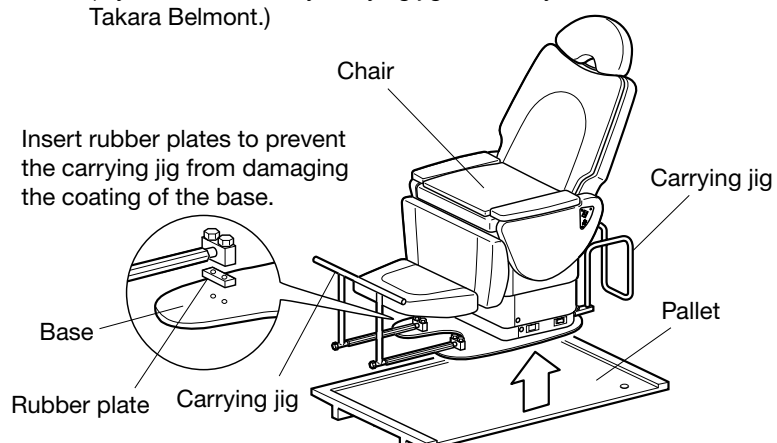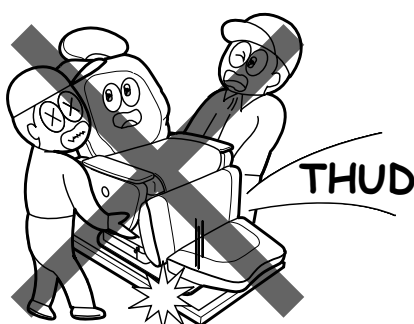


2 Attach rubber plates to the bottom of the base.

Once you decide where to install the chair, lift the base from the floor and attach rubber plates to the bottom of the base at the spots illustrated in the figure below.

- It is easier to attach them if you lift the base on one side at a time.
- If the chair wobbles, make it stable by placing extra rubber plates on top of one another.

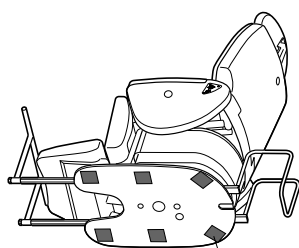


Rubber plates

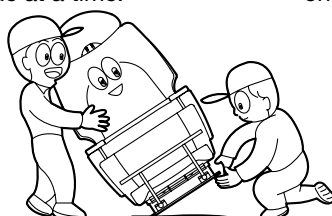

Cardboard



Rubber plates

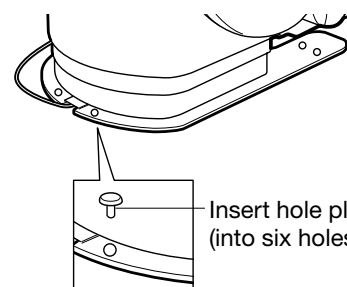

Insert hole plugs (into six holes)

NOTE

- In order not to damage the floor, place a sheet of cardboard on it.
If the installed chair wobbles due to a problem with the floor, place extra rubber plates on top of one another for adjustment. (The chair comes with eight extra rubber plates.)
- Removing the carrying jig leaves (six) screw holes. Insert hole plugs into the holes.

ESTHEPLACE Installation Manual

3 Inserting the power plug into a socket.

Insert the power plug into a socket equipped with an earth terminal.



Be sure to earth the chair just in case.

Earth connection prevents electric shocks.


Adjusting the preset positions

You can change the factory-configured positions assigned to the preset switches to positions of your own choice in the following way:

- 1 Turn on the power switch. Bring the chair parts to the desired positions.

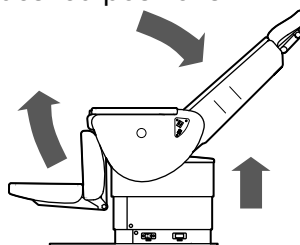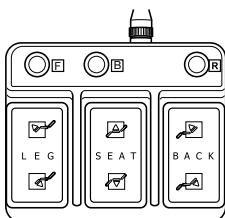

- 2 Turn off the power switch.

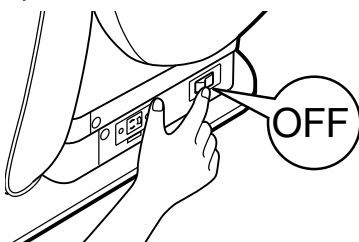

- 3 While holding down the preset switch (F or B) you want to work on, turn the power switch back on and keep holding it down for approximately 5 sec.





A beep sounds.



Hold it down until a beep sounds.

Preset switch F

Preset switch B

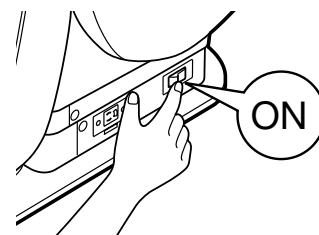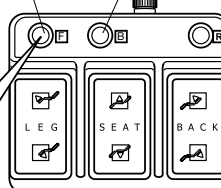

- 4 The beep indicates that the setting modification has been completed. Step on the auto-return switch to return the chair parts to their initially set positions. Then, step on the preset switch you have just worked on and check if the parts move to their newly assigned positions.

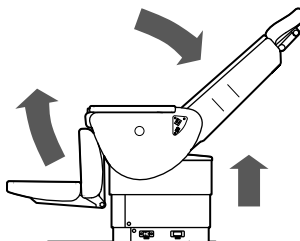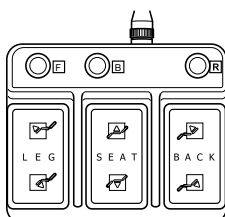

⚠ WARNING

- Pay extra attention to the legrest position, so that the customer's feet don't hit any equipment nearby.
- Have a person sit in the chair when modifying the position settings.
If you set the positions with no one sitting there, there will be a slight difference between the set positions and the actual positions, due to the shockless motion function.