 


Eyelash Chair RICHE

■ Eyelash Chair Riche
Model No. SC-EL141

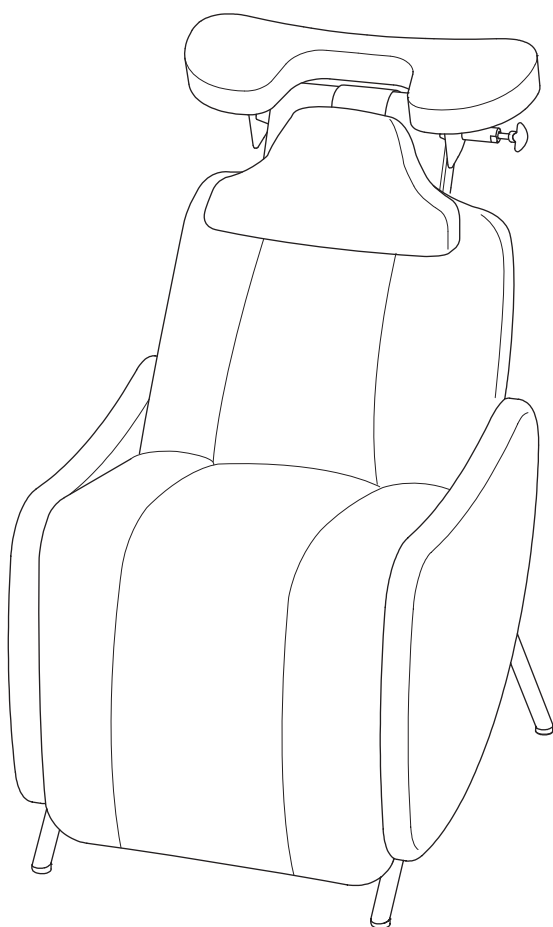

Thank you for purchasing this TAKARA BELMONT product.

Please read through this Operating and Installation Manual carefully before installing or using the product to ensure correct use.

Failure to read this manual may lead to accidents. This product is designed for commercial use at barbers and beauty salons. Do not use this product for purposes other than eyelash extension treatment.

Table of Contents

Description of Warning Symbols	2
Safety Precautions	2
Precautions for Use	4
About This Product	4
Notes for Use with Upholstery (Synthetic and Natural Leather)	5
Names of Parts	5
Accessories	5
How to Install	6
How to Use	8
Specifications	12
Daily Maintenance	13
Standard Duration of Use	14
Consumable Supplies	14
Disposing of This Product	14
After-Sales Service	15
Daily Inspection	16

2020.06

Order No. 1A0U9LA0

Ver. 1

Description of Warning Symbols

■ Before Use

Be sure to thoroughly read these precautions related to safety and operate the chair accordingly in a safe manner.

■ Precautions Listed Here

The precautions listed here are to ensure that this product can be used safely, and to prevent any danger or risk to the person using this product or those around them.

These precautions are important for ensuring safety. Adhere to these precautions at all times.

Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents if this product is used without adhering to the "Safety Precautions" and "Precautions for Use." In this case, the person failing to adhere to the "Safety Precautions" and "Precautions for Use" will be responsible for any damage or risk incurred. Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading this manual.

■ Symbols



Warning

This symbol warns the user that "ignorance of this display and improper use may cause death or serious personal injury."



Caution

This symbol warns the user that "ignorance of this display and improper use may cause slight to moderate personal injury or property damage."

Notice

This explains the items that are recommended to be observed for safety.



Common danger, warning, and caution notifications



Common prohibited actions



Disassembly prohibited

Indication prohibiting disassembly, repair, or modification



Guidance or instruction regarding common user actions

Safety Precautions (be sure to observe them)



Warning

Do not move the chair with a person on it.



Do not move the chair with a person on it. Failure to do so may cause the chair to break or fall.

Do not seat two or more people on the chair.



Do not sit on the chair with two or more people. Do not allow persons weighing more than 135 kg. Failure to do so may cause the chair to fail or be damaged, resulting in injury.

Do not jump into the chair.



Do not jump into the chair. Doing so may damage the chair or cause injury.

Do not climb on the chair.



Do not climb on the chair. Doing so may damage the chair or cause injury.

Do not use the product for any other purposes.



This product is a chair intended for eyelash extension treatment. Using the chair for unexpected services may damage the chair or cause an accident.

When getting on and off the chair, get on and off from the seat.



When getting on and off the chair, get on and off from the seat section. If you get on or off from the backrest or leg rest, the chair may fall over and cause injury.

When getting on and off the chair, guide the customer so that it does not fall over.



When getting on and off the chair, guide the customer to the center of the seat to prevent the customer from tipping over. Due to the specifications, the upholstered parts are soft. If you get on and off with your body weight other than at the seat center, the upholstered parts may be deformed and fall, resulting in damage to the chair or an accident.


Safety Precautions (be sure to observe them)



Warning


Continued from the previous page

Observe the following precautions for chair reclining.

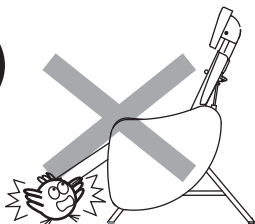

When reclining the chair, always make sure that no one is near the chair and then operate it. There is a danger of serious injury if it hits someone.

Ask customers to get on and off the chair after raising the backrest and lowering the leg rest.

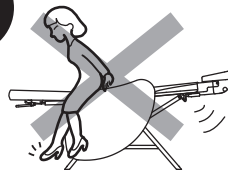

When getting on and off the chair, be sure to raise the backrest and lower the leg rest. Getting on and off when the leg rest is raised may cause the chair to fall, resulting in injury.

If the chair does not move or an abnormal condition is detected, stop using the product.



If the product does not move or you notice any abnormal conditions, immediately stop using the product and contact your nearest dealer or Takara Belmont directly.


Do not use the product with the plating peeled off.



If the plating has come off, contact your nearest dealer or Takara Belmont directly and replace it. Continued use may result in injury.

Do not disassemble, repair, or modify the product.

Never disassemble or repair the product by anyone other than qualified repair technicians or our after-sales service personnel. Failure to do so may result in an accident or malfunction.

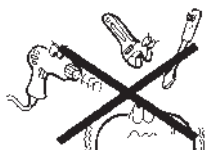

Do not recline the backrest when the leg rest is lowered.



If you do not lay down the backrest, customers may be injured by putting a strain on their waist. Always raise the leg rest before you lay down the customer, and always raise the chair back before lowering the leg rest when you raise the customer.

Be careful when moving the chair.



When moving the chair, be sure to hold the base frame by two or more persons according to "When moving the chair" (page 6). Carrying the chair by holding only the upholstered part may damage the chair. Never do this.




Caution

Do not hook and pull the cord of any equipment used with this chair.



Do not hook and pull the cord etc. on the backrest adjustment lever of the chair. If the cord is pulled or the chair is reclined, the chair or equipment around the chair may be damaged. Failure to do so may result in electric shock or injury.

Place the chair on a stable surface.

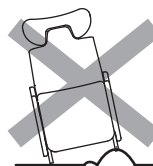

Place the chair on a flat, secure floor. Otherwise, the chair may tip over.

Do not shock the chair.



Do not shock the chair. Failure to do so may damage the chair and cause injury.

Do not lean on the chair.



Do not lean on the chair carelessly. The chair may recline and tip over, causing injury.

Do not place anything else on the chair.



Do not place anything else on the chair. Doing so may cause the leather to deform, tear, or corrode.

Do not step on the leg rest.



Do not step on the leg rest when the leg rest is raised. The chair may tip over.

When reclining the chair, make sure that there are no objects around it.



When reclining the chair, make sure that there are no objects around the chair, such as a wagon table or stool. Contact may cause the chair to tip over or break.

Precautions for Use



Caution

Wipe off any chemicals immediately.  Wipe off any oil, chemicals, or glue (adhesive) immediately. Chemicals may cause discoloration, deterioration, or deformation. Also, immediately wipe off any oil, chemicals, or glue (adhesive) on the floor.	Do not drag when moving the chair.  Never drag the chair when moving it. Moving the product by dragging it may damage the floor surface or cause the chair to break or be damaged. 
Do not expose to steam from a steamer directly.  Do not expose the product to steam from a steamer directly. Doing so may discolor or deteriorate the leather or rust the metal parts.	Do not wipe with chemicals.  Doing so may cause deterioration or discoloration. Wipe off any chemicals on the leather or metals immediately.
Do not move the backrest or leg rest forcibly.  Doing so may cause malfunction or failure of the reclining. Be sure to operate and move the backrest adjustment lever.	After use, be sure to wipe off any moisture from the chair.  Leaving the product with moisture on it may cause chair failure or prevent it from being clean.
Avoid direct sunlight and heating equipment heat.  Avoid direct sunlight and heat from heaters such as stoves. Doing so may cause deterioration, deformation, or deterioration of the leather. Also, do not use it on heating appliances such as hot carpets. Failure to observe this warning may cause a fire.	Do not use the product outdoors.  This product is designed for indoor use only. Do not install the product outdoors or in a vehicle. Be sure to use the product inside a hair salon or a beauty salon.
Do not leave genuine leather, vinyl-based products, denim, magazines, etc. in the leather section.  In the leather section (backrest, seat, leg rest), do not allow other leather products (bags, etc.), vinyl-based products, jeans, or printed materials (books, magazines, etc.) to come in close contact. Color or ink may transfer and become stuck, and it may be impossible to remove it.	Do not expose the leather to sharp objects.  If a sharp object hits the leather, it may tear or damage the leather.
	Do not operate with excessive force.  Do not apply excessive force to the chair or operate the chair with excessive force. The chair may be damaged.

- To use the product safely, perform the inspection according to "Daily Inspection" on page 15 of this manual.

About This Product

This product is a chair for eyelash extension treatment in a beauty salon.

When using the product in combination with a wagon or table, thoroughly read this manual and the Operating Manuals of the wagon or table for safe use.



Caution

- Do not use this product for any other purpose, such as body treatment or shaving. Failure to do so may cause the chair to fail or break, or injury to yourself.
- Wrinkles on the leather.
This product has creased parts due to the design of the chair. In addition, a soft cushioning material is used to give the tension a sense of volume. Wrinkles may spread out, depending on long-term use or usage conditions.

Notes for Use with Upholstery (Synthetic and Natural Leather)


● Adherence of fabric dyes

The upholstery may be stained by coming into contact with fabric, belts, or other such attire. To avoid infiltration by plasticizer when color has been adhered, apply a solution of neutral detergent diluted by about 10% to a soft towel and wipe off the color as soon as possible. After wiping off the color, wipe the area dry.

● Caution for deterioration and color staining caused by contact

- Contact with items such as other plastic parts, paints, solvents, and adhesive tape may cause changes to the surface sheen, cracking, deformation, or peeling.
- Contact with newspaper or printed materials may cause color staining.
- Contact with items such as benzene, polish remover, or alcohol may cause the surface to discolor, dissolve, harden, soften, peel, extract plasticizer, or experience changes to its sheen.
- Using bleach or sheets that use bleach may cause discoloration or changes to the sheen.
- When placed next to a source of excessive heat such as an iron or heater, deformation or discoloration may occur.
- Shield the upholstery with a curtain or other such items so that it does not come into contact with direct sunlight. Otherwise, surface changes, shrinkage, discoloration, or fading may occur.
- Heavy objects placed on the upholstery for long periods of time may leave an impression, and it may then be impossible to remove wrinkles.

Names of Parts

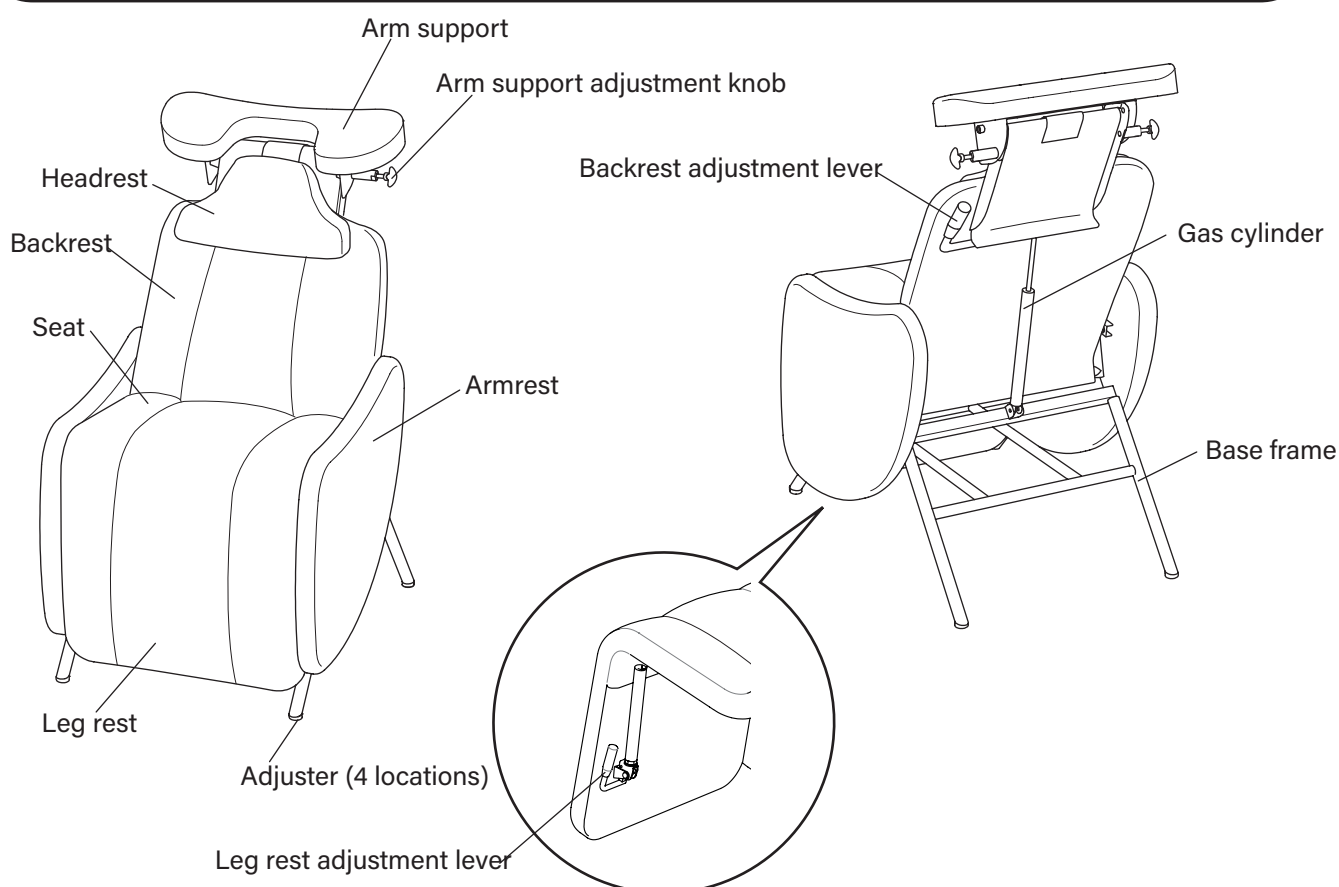

Accessories


- ☐ Operating Manual (this manual)

How to Install

■ When moving the chair

Be sure to use two or more persons to hold the base frame and move it.

Carrying the chair by holding only the tension part may damage the chair. Wipe the area dry.

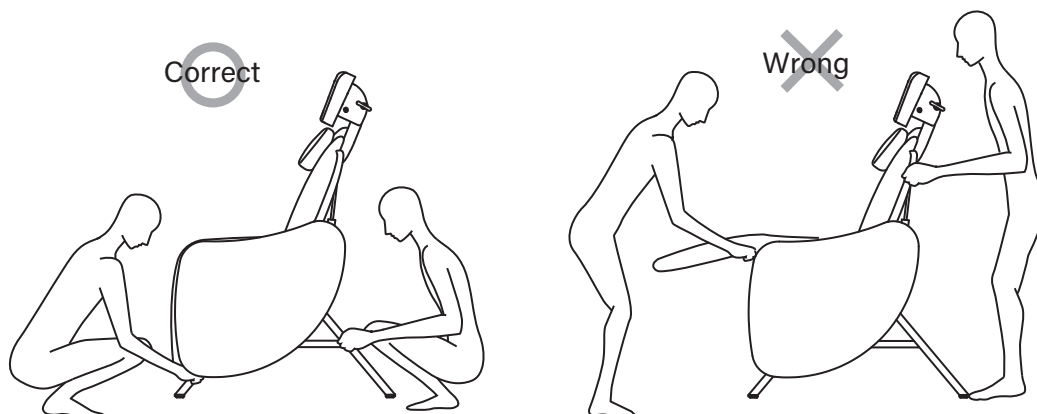

Warning

- Do not move the chair with a person on it. Failure to do so may cause the chair to tip over, either causing it to break or resulting in an accident.
- When lifting and carrying the chair, always hold the base frame with two or more persons. Carrying the product by holding only the moving parts such as the backrest or leg rest may cause the product to operate unexpectedly, resulting in serious injury. Never do this.




Caution

- Moving the chair by dragging it may damage the floor or cause the chair to fail or be damaged.

■ Adjusting the adjuster

If the chair does not stabilize due to the gap with the floor, adjust the adjuster.


Leg rest

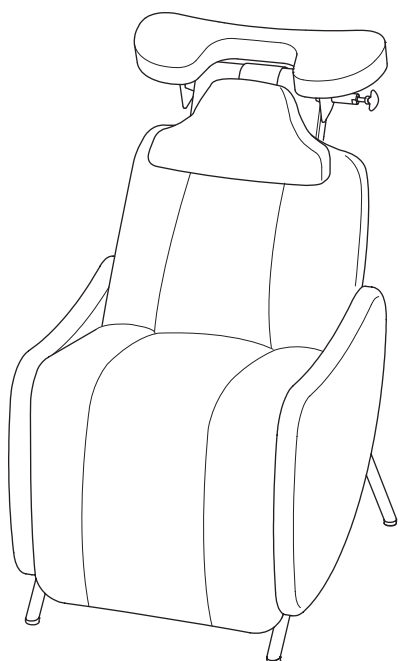

Turn the adjuster clockwise to elongate;
turn counterclockwise to retract.

Extend



Shrink

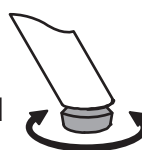

How to Install

■ Installation dimensions


(unit: mm)

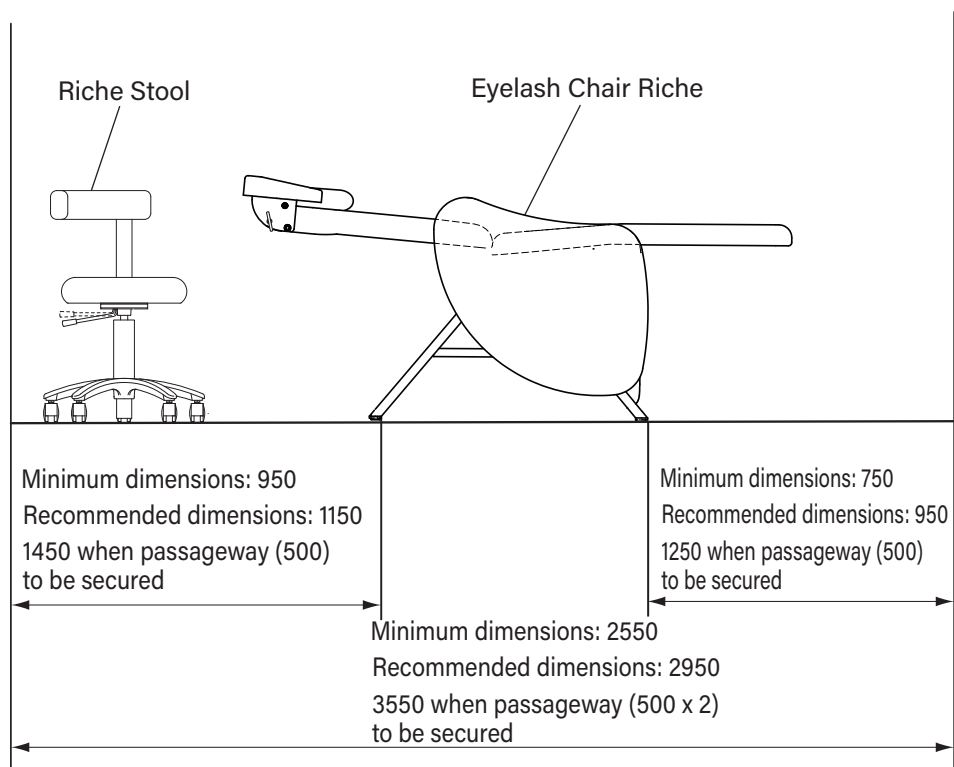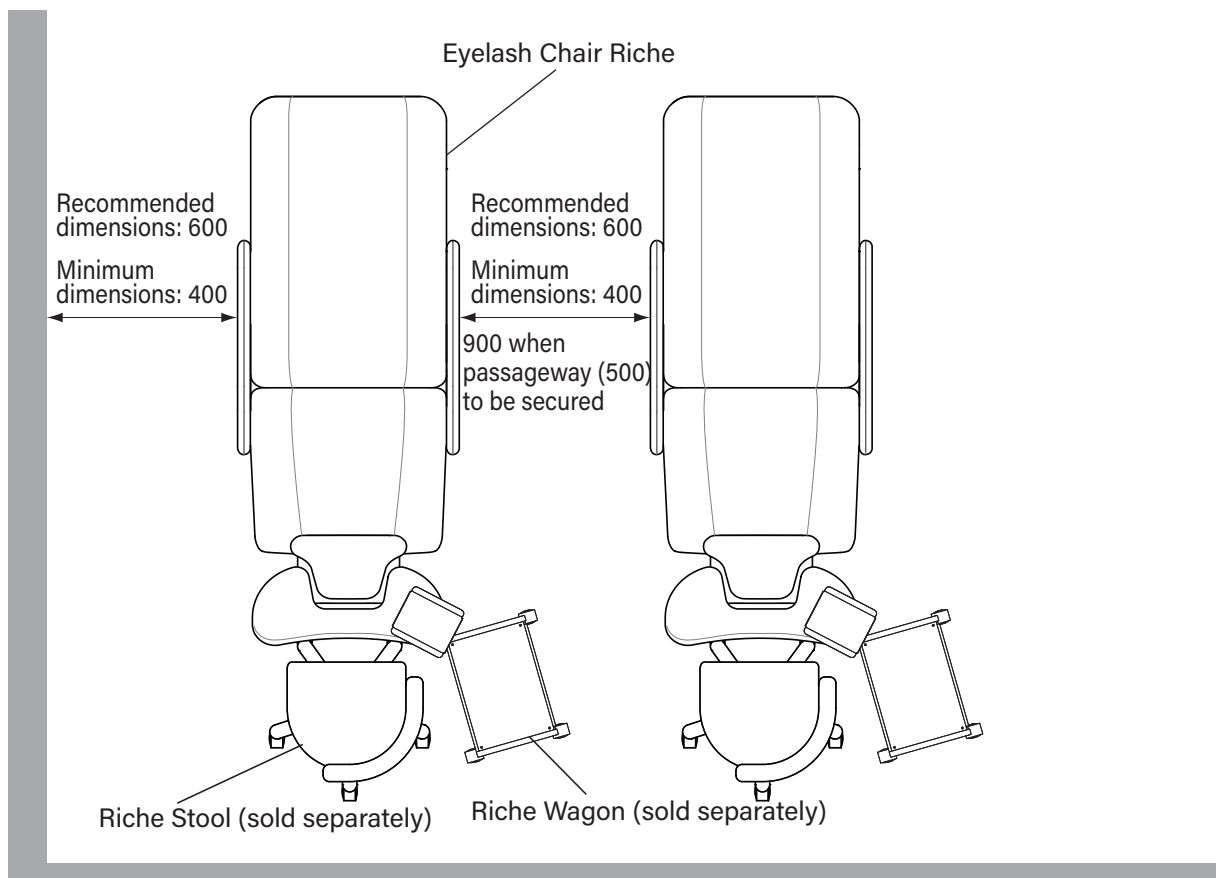

How to Use

1 Guiding a customer

Guiding the customer to the chair.
Ask the customer to sit in the seat
from the front side of the chair and sit
down deeply.

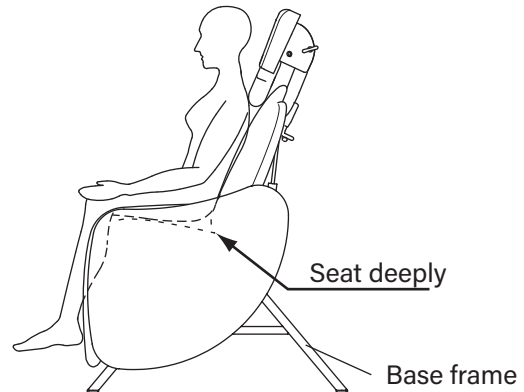


- Be aware of the base frame when getting on and off. Take care not to catch your feet on the base frame. If it is hooked by mistake, it may fall and cause injury.

2 Guiding a customer to the treatment position

1. Operate the leg rest adjustment lever to raise the leg rest.

■ Reclining operation of the leg rest

- ① Hold the leg rest adjustment lever in the direction of the arrow and unlock the leg rest adjustment lever.
A guideline of the position of the leg rest adjustment lever is the position of the tag of the leg rest.
- ② While holding the leg rest adjustment lever, hold the lower part of the leg rest with the other hand and adjust the angle of the leg rest.
- ③ Align the leg rest to the appropriate angle and remove your hand from the leg rest adjustment lever; then the leg rest is stopped at the position.


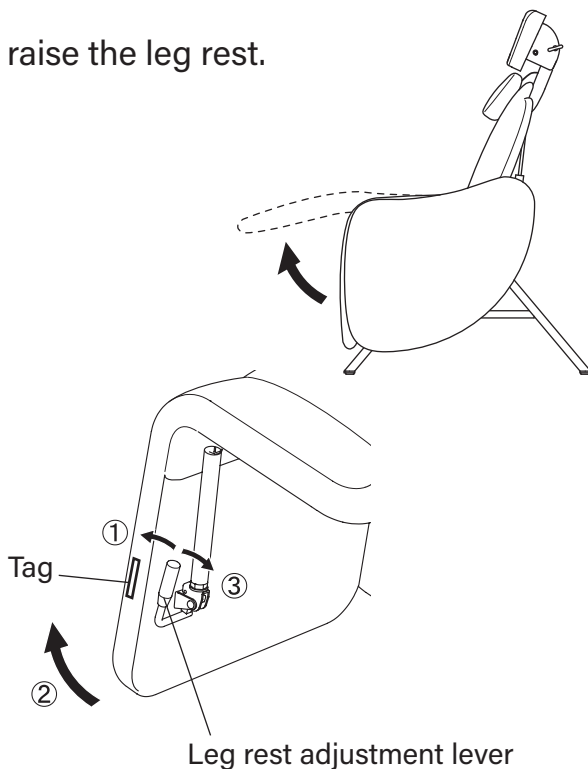


How to Use

2. Then, operate the backrest adjustment lever to lay the backrest down and position it for easier operation.

■ Reclining of the backrest

- ① While holding the top of the backrest with one hand, operate the backrest adjustment lever with the other hand in the direction of the arrow to unlock it.
- ② While holding the backrest adjustment lever, adjust the backrest angle with the hand that supports the backrest.
- ③ Align the backrest to the proper angle and return the backrest adjustment lever to its original position. Remove the hand from the backrest adjustment lever, then it will be in place.

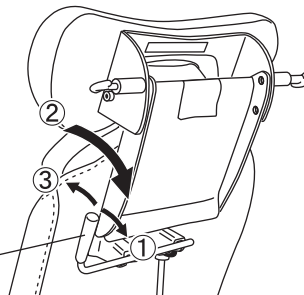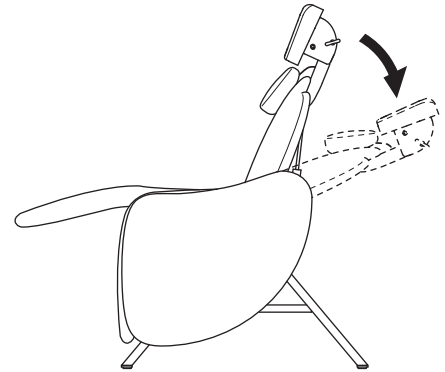

Backrest adjustment lever



- Recline the backrest of the chair after raising the leg rest.
If you lay down the backrest without raising the leg rest, the customer may get injured by putting a burden on the waist. Be sure to lift the leg rest and then recline the chair back when you guide your customer to sit.

How to Use



Warning

- When operating the backrest or leg rest, be sure to check that there are no human hands or fingers in the clearance of the chair. There is a danger of serious injury if it hits.
- Do not recline or raise the backrest during the procedure. If you do, it is dangerous because it may cause injury where the esthetic equipment or tool will make contact with the eyes.
- Please raise or recline the backrest slowly when a customer is seated in the chair. The chair may lose balance if the backrest is reclined or raised vigorously.
- Be careful not to allow the user or other persons to touch the lever during the procedure. If the lock is not released intendedly, the chair may collapse due to imbalance, such as the backrest falling over vigorously.



Caution

- When operating the backrest or leg rest, make sure that there are no people or objects around it. Doing so may damage the chair or cause injury.
- The backrest adjustment lever can be operated by a light force. Do not operate the backrest with excessive force or operate it in the opposite direction. Doing so may deform the lever or cause a malfunction.
- Do not allow the customer to adjust the angle of the backrest. Adjustment during operation or operation with excessive force may cause injury or damage to the chair.



3

Guiding a customer to a position that is easy to treat

The guideline for the position where a customer can comfortably spend time and the position that is easy for operation is one where the hole of the customer's ear is aligned with the position of the recess in the headrest (Fig. ①).

If the position is to be adjusted slightly, ask the customer to hold the armrests and guide the customer to move to the position where the customer's eyes are positioned to the line where it can be easily treated (Fig. ②).

The approximate space between the customer and the practitioner is one fist. (Fig. ②)

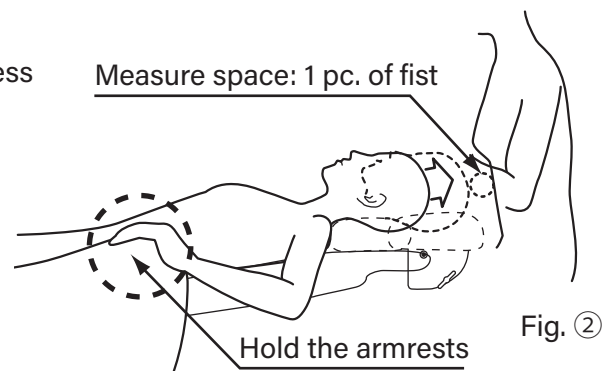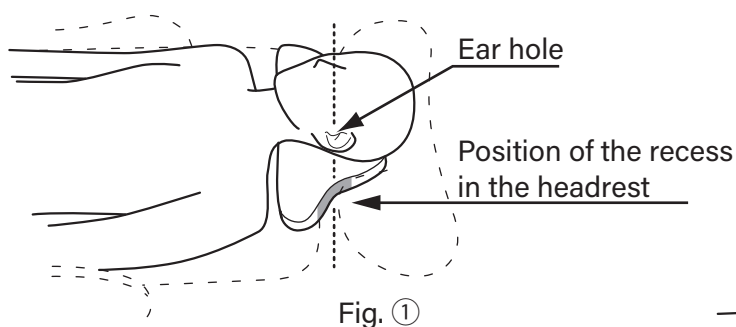

Warning

- Keep in mind the place where the customer's hands are to be placed when the customer adjusts the lying position in a chair. Hold the armrests firmly and adjust the position. Be careful not to put your hands between the seat and the armrests by mistake.
- Be careful not to get your hands or hair caught in the reclining mechanism section of the backrest or leg rest or the mechanism section of the arm support. Movement of your hands or hair in the clamped state may cause injury.


How to Use

4 Selecting the arm support position

This product can be selected from two treatment positions for use. Select a position that is easy to use.




Position A

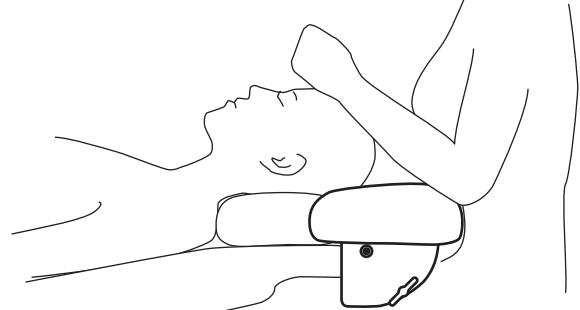

Position B


- ① Pull both the right and left arm support adjustment knobs in the direction of the arrow to unlock.
- ② Move the arm support in the direction of the arrow and align the arm support adjustment knob with the hole position A or position B.
- ③ Return the arm support adjustment knob in the direction of the arrow. Move the left and right knobs until they snap into place. Check that the axis of the arm support adjustment knob is securely inserted into the hole and secured.

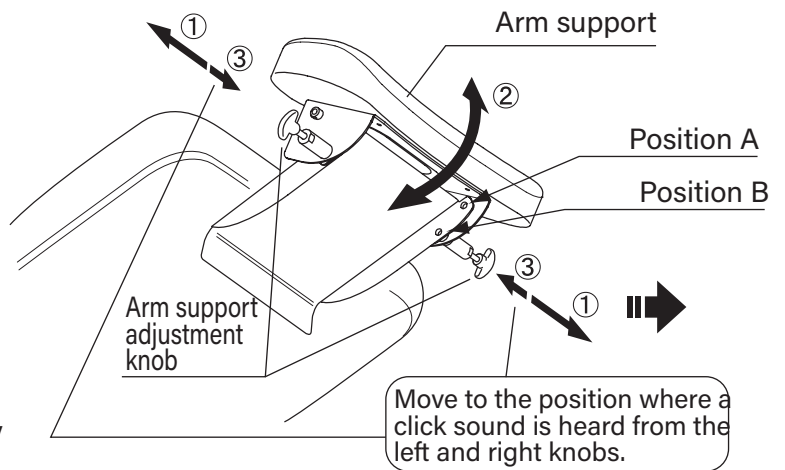

5 Setting the positioning

Adjust the backrest angle and set the positioning.

Fine-tune the backrest angle so that the arm support firmly holds the arms. While holding the backrest adjustment lever in place, adjust the backrest angle with the hand that supports the backrest. (The measured standard angle is 5° to 10°.)

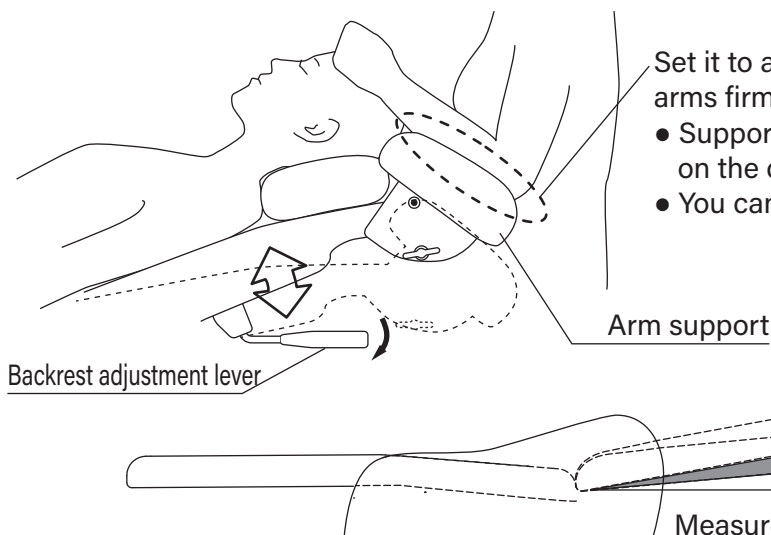

Set it to a position where it can support the arms firmly.

- Supporting the arms avoids applying a burden on the customer's forehead.
- You can stabilize your hands during fine work.

Backrest adjustment lever

Arm support

10°

5° (most laid)

Measure the angle of the backrest

How to Use

6

Raise the customer and return it to its original position.

After finishing the procedure, lower the leg rest after raising the backrest and return it to its initial position. The operation direction of the lever is the same as when you lay down the customer (page 9).



- Lower the leg rest after raising the backrest of the chair.
If the leg rest is lowered without raising the backrest, the user's waist will be stressed and injured. Doing so may result in damage. When raising the customer, be sure to raise the backrest of the chair before lowering the leg rest.




- Be careful not to pinch your hand between the armrest when folding the leg rest.
- Do not extend your fingers to the gas cylinder of the leg rest when holding the leg rest. You may pinch your fingers in the moving parts of the gas cylinder. Do not put your fingers behind the lever more than necessary.

Specifications

Model no.	SC-EL141
Model name	Eyeshair Chair Riche
Weight	34.5 kg
Maximum working load	1350 N (135 kgf)
Material	Chair upholstery: vinyl leather

Note: This may differ from the actual dimensions.

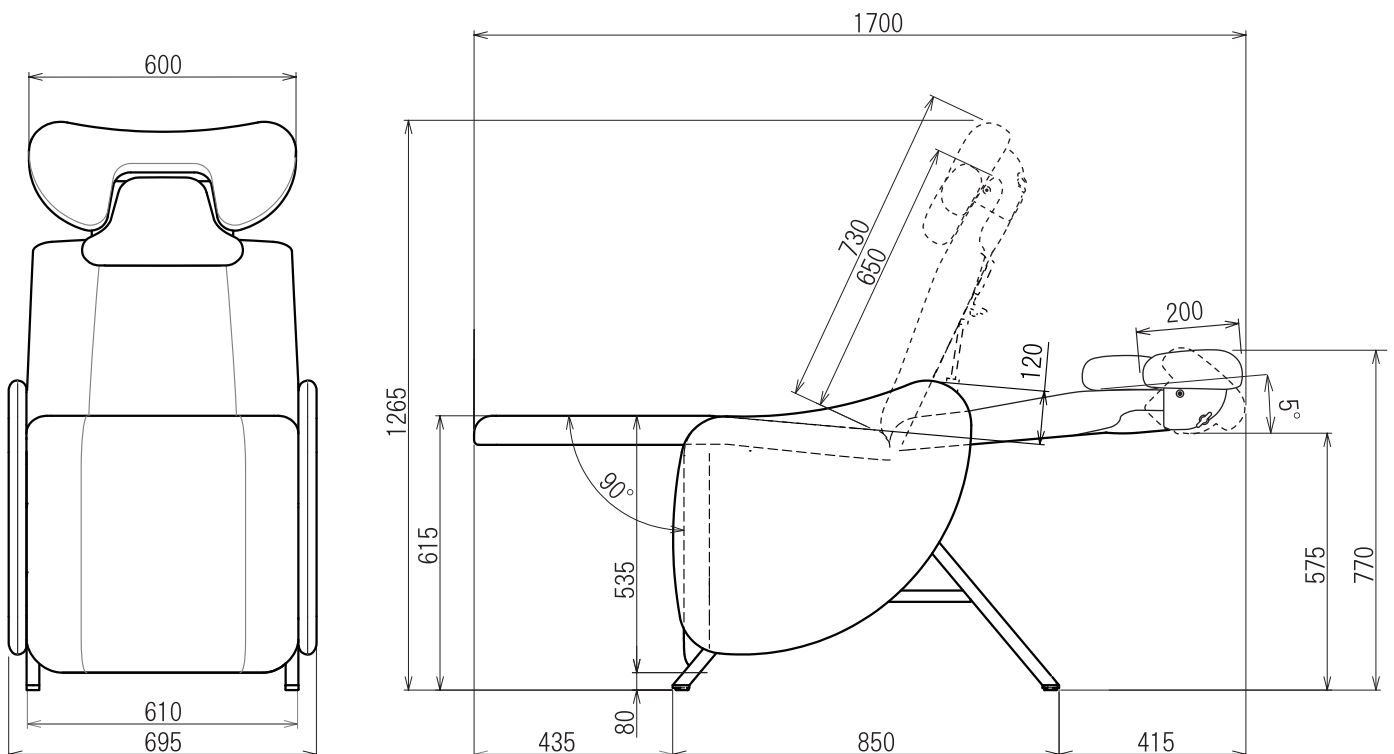


Daily Maintenance

- Maintain the product daily after completion of your daily work.
Mold may form if the product is left dirty.



Never use thinner, alcohol, gasoline, kerosene, or other volatile chemicals, abrasive waxes, abrasive sponges, or detergents containing organic solvents, or cleaning tools such as acidic, alkaline, chlorine-based detergents, or scourers. Doing so may cause scratches, discoloration, etc.

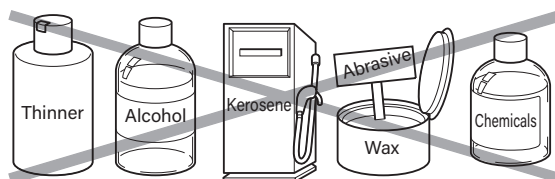

Synthetic leather part

- Wipe with a soft, dry cloth, and then wipe with a wet cloth. After wiping with water, perform dry wiping thoroughly.
- If the unit is extremely dirty, wipe it with a neutral detergent diluted to 10% with water, then wipe it thoroughly with water, and then dry it thoroughly.
- If the colors of clothes, belts, etc. remain, immediately wipe them off even when the work of one day is not completed, in order to avoid penetration by plasticizer.



- Do not dry powerfully with a dryer, etc.
- Be careful not to hit the chair with cleaning tools when cleaning. The chair may get scratched or damaged.
- When wiping with water, wipe thoroughly after that. If moisture remains, hydrolysis may be accelerated.
- Do not use solvents or bleach.
- Do not use leather cleaners that contain solvents or abrasives. This may deteriorate the surface and alter the texture and luster. When using a leather cleaner, make sure that no color drops at an inconspicuous point before use.
- Do not use brushes, scourers, etc. during maintenance. Doing so may cause scratches or failure to remove dirt.

Metal parts

- Wipe gently with a soft, dry cloth.
- If water or chemicals are splashed, even after one day of work, wipe off water immediately. It may cause rust.



Be very careful when cleaning. Do not touch metal parts such as the back side of the seat as it may cause injury.

Standard Duration of Use

- The standard period of use of this product is seven years.
- The standard period of use is "a guide for the standard period that this product can be used properly from a safety perspective, when conducting appropriate maintenance and inspections (including replacement of parts) for the standard usage conditions for each product." This is not the same as the warranty period.

Consumable Supplies

The following parts are "consumable supplies," and wear, degradation, changes in external appearance, and damage are expected. Please note that repair or replacement of these parts is not covered by warranty, and a fee will be charged. (Note: The level and period of wear, degradation, or damage may differ, depending on the environment and conditions that the client uses this product in.) Inspections or replacement of parts will be required if extensive wear, degradation, or damage occurs.

Consumables (the following parts are not covered by the warranty and will be charged)

- There are no specified parts for this product.

Besides, the following exterior parts are not covered by the warranty for scratches, stains, deterioration, or fading of the exterior:

- Upholstered part
- Metal-coated parts (pipes, sheet metal, etc.)
- Resin parts (adjusters, etc.)

Disposing of This Product

When disposing of this product or replaced parts, adhere to current regulations and dispose of them appropriately according to the law in your country.

After-Sales Service

For after-sales service, contact your nearest dealer or Takara Belmont directly.

Daily Inspection

To use the product safely, perform the following inspections every day.
Continued use without routine inspections may result in breakdowns and accidents.

Inspection item	How to check	In the event of rejection as a result of inspection
☐ Check that the leg rest is not rattling. ☐ Check that the backrest adjustment lever or leg rest adjustment lever is not rattling. ☐ Check whether the chair works correctly.	☐ Gently push or shake the entire chair and confirm that there is no rattling. ☐ Gently push or shake the top of the backrest or the edge of the leg rest back and forth and left and right and confirm that there is no rattling. ☐ Gently push or shake the lever and confirm that there is no rattling. ☐ Check that no rattling or unusual noises are heard from the chair during operation.	☐ It may cause the chair to malfunction, break, or fall. Stop using and contact your nearest dealer or Takara Belmont directly. ☐ It may cause the chair to malfunction, break, or fall. Stop using and contact your nearest dealer or Takara Belmont directly. ☐ It may cause the chair to malfunction, break, or fall. Stop using and contact your nearest dealer or Takara Belmont directly. ☐ It may cause the chair to malfunction, break, or fall. Stop using and contact your nearest dealer or Takara Belmont directly.

